Firmware install with Windows Vista

Step 1. Go to our website <u>www.midnitesolar.com</u> and Left Click on Firmware.



Step 2. Left Click on Download Firmware.



Step 3. Read the Notes in red first and then Left Click on Download Firmware.



Step 4. Left Click on Save File. (Note these screen shots are done with Mozilla Firefox see alternate browsers.)



Step 5. After the Download, Windows 7 should leave a box like this. If not go to your Documents and Downloads and you will find it there. Double Left Click on the MidNite Solar file.



Step 6. You will be asked by windows if it is ok to download. You may also be asked by your antivirus if it is ok as well. Left Click Yes to continue.

	and sells, advanced electror combiner boxes, disconnect	ic devices, Updated November 9, 2011	
	installation aids specific to renewable energy industry	User Account Control	problems downloading or tailing firmware contact
	Classic Charge Controller advanced features and but Protection not available fro manufacturer. Our new light	Do you want to allow the following program from a unknown publisher to make changes to this compute	chnical Support Nanager er? digmidnete solar.com
	arrestor is the first in our in offer real protection to pow electronics, low cost rebuil competitive price.	Program name: MidNiteSolarSetup_11-9-2011.ave Publisher: Unknown File origin: Downloaded from the Internet	
	With the ever changing ele- codes, our engineers stay industy with new designs solutions. All of our produc substantially made in Ame new machines and jobs a	Show details Yes No Change when the perfections a	
Doenloeds			_
MidNites	SolarSetup_11-9-2011.exe ndokeslar.com	And	
Looking 120 KB — n	towards st albans.jpg nidnitesolar.com	Yearday um input current limit adjustment tito the Limits menu	

Step 7. After reading the License Agreement Left Click Yes.



Step 8. Make sure the file is saving as shown below. Windows should select this for you. Left Click Next.





Step 10. View Read Me file should be checked and Left Click Finish



Step 11. The Read Me file will open and we encourage you to scroll down and see what changes have been made. After reading all the info simply Left Click the Red X.



Step 12. You will now need to have the USB cable that came with the Classic and we will assume it is already plugged into the USB jack in the Classic. The jack is inside the Classic case beside the Ethernet jack and the Temperature sensor plug. If you need help with this stage please consult the owner's manual.

CLASSIC POWER WIRING



Step 13. With the power on to the Classic, plug the other end of the USB cable into the PC you are using to install firmware. The "Found new Hardware" window will open, Left Click on the Choice shown.



Step 14. Windows will ask if it is ok to search online for the driver Left Click "Don't search online".



Step 15. Left Click the "I don't have the disc" selection.



Step 16. Left Click the "Browse my computer" selection.



Step 17. Left Click "Browse", Left Click "Computer", Left Click "C" then Left Click "MidNiteSolar". Now Left Click OK and Next on the underlying window.

A	und New Hardware - BootLoader Version 1.04	
Browse	for driver software on your computer	Step 1. Left Click here
Search	for driver software in this location:	
C:\AC	ERSW\MODEM	▼ Browse
✓ Incl	lude subfolders	
	Browse For Folder Select the folder that contains drivers for your h	Arroware Step 2. Click to find MidNiteSolar and lef
	 □ IN Computer □ ACER (C:) □ Acer Book 	Step 3. Left Click OK
	DRV	and then Next
	Intel Memeo MidNiteSolar	Next Canc

Step 18. Left Click on "Install this driver software anyway".



Step 19. Left Click Close.



Step 20. Now we need to set the Com port to 8. Left Click on "Start", Right Click on "Computer" and Left Click on "Properties".





🖬 System			_ 0
🕥 🛛 🖉 🔻 Control Panel 🔻	System and Maintenance 🔻 Syste	m 👻 🚮 Search	
File Edit View Tools Help		🔒 Encrypt File 🔓 Decrypt Fil	e 💊 Open/Close PSD
Tasks	View basic information about y	your computer	
 Remote settings System protection Left Clic 	Windows Vista™ Home Pre copyright © 2007 Microso	mium ft Corporation. All rights reserved.	
🕐 Advanced system settings	Service Pack 2 Upgrade Windows Vista		
	System		
	Manufacturer:	Acer	
	Model:	Aspire 5610Z	
	Rating:		acer
	Processor:	Not Available	acci
	Memory (RAM):	Not Available	
	System type:	32-bit Operating System	
See also	Acarcumpat		
Windows Update	Ace support		
Security Center	website:	Unline support	
Performance	Computer name, domain, and	workgroup settings	S

Step 22. Left Click on the little + sign to the Left of "Ports (COM & LPT). Right Click on "USB CDC Serial port emulation" and Left Click "Properties".



Step 23. Left Click on the "port settings" tab as shown. Check the settings but they should be fine by default and then Left Click the Advanced button.

Check these Settings they	s per second: 9600	
hould be fine by	Data bits: 8	-
Default	Parity: None	-
	Stop bits: 1	•
	Flow control: None	•
	Advanced	Restore Defaults
Left Cli	ick here	

Step 24. Left Click on the drop down arrow beside Com port number. Left Click on COM8 even if it shows in use. Left Click OK. This concludes the port settings we can now close all open windows and prepare to update the firmware.

anced Settings for COM6	iner.						2
🔽 Use FIFO buffers (requ	uires 16550 d	compatible UAR	T)		-	-	ОК
Select lower settings to	correct cor	nection problem	ns.			-	Count
Select higher settings f	for faster per	formance.					Cancel
Receive Buffer: Low (1)			1	—Q	High (14)	(14)	Defaults
Transmit Buffer: Low (1)	3 1	v	10	Ģ	High (16)	(16)	
COM Port Number: COM6	•	-	_				
COM6 COM7 COM8		Clic	kher	Pa	nd s	eler	-
COM9 COM10	III	Circ	A Her		14.5	cici	
COM11 COM12 COM13		COL	VI8 er	ven	if it	say	's it is
COM14 COM15 COM16	F	in,u	se T	hen	Clie	ck O	K
COM17 COM18	+		he n		-		
COM19		ont	ine n	ext	10 5	cre	ens

Step 25. Find the MidNite Icon and Double Left Click on it to open the program.



Step 26. With the Classic powered off and the USB cable plugged in you will need to select the Classic model you have. (150,200 etc)

MidNite Solar U	JSB Uploader 2012A	
Update CLASSIC 150V	Update CLASSIC 200V	
Update CLASSIC 250V	Update CLASSIC 250 KS	
Update M	INGP REMOTE	
POWER DOWN THE CLASSIC TO PC CLICK THE BUTTON ARE UPDATING THE PC SHOUL AND ITS US	CONNECT THE USB CABLE FROM CLASSI FOR THE CLASSIC MODEL OR MNGP YOU D BE WAITING FOR THE CLASSIC POWE IS TO COME ALIVE	C R
NEXT, POWER UP THE CLASSIC. FIRMWARE UPLOAD MAY TA COMPLETE THE MNGP WILL THAN TH	AND UPLOAD SHOULD START KE FROM 5 to 15 MINUTES TO TAKE A LONGER TIME TO UPDATE IE CLASSIC	
MAKE SURE TO UPDATE	E BOTH THE CLASSIC AND MNGP	Close
USB DRIVERS MUST BE IN: UPDA	STALLED PRIOR TO USING THIS TE SCREEN	



Step 27. You will get the following windows security question Left Click Yes

Step 28. A second Black box will pop up at this time turn the power on to the Classic and the box should say Com8 Open and start counting up in percentage. (Note sometimes the Computer is slower than the Classic and this Com8 Opened will not pop up. In this case close the boxes and retry)



This process should take between 5-15 minutes and the box will go away when it is complete.

Step 29. At this point you need to power down the Classic and Left Click Update MNGP. You will get the same windows security question as before. Left Click Yes and when the second Black box pops up turn the power on to the Classic and Com8 Open should show and it will start slowly counting to 100% this will take around 15 minutes.

After the box goes away for the MNGP power off the Classic and power it back on and you should be all set. Please check all settings to ensure they did not change. None of your custom settings should change but we prefer to be safe here.

Alternate Browsers

Google Chrome

On Google Chrome when you click on download the file will show up in the bottom left of the browsers screen.



Internet Explorer 9

IE9 is a little different. It really does not want you to download stuff. Below you will find the appropriate screen shots.

Left Click on Run



Left Click on Actions



Left Click on More Options



Left Click Run anyway. After this return to the main directions Step 6

