


MNTRB80 AS GENERATOR TRANSFER

1- Verify the jumpers are installed on J2 and J4

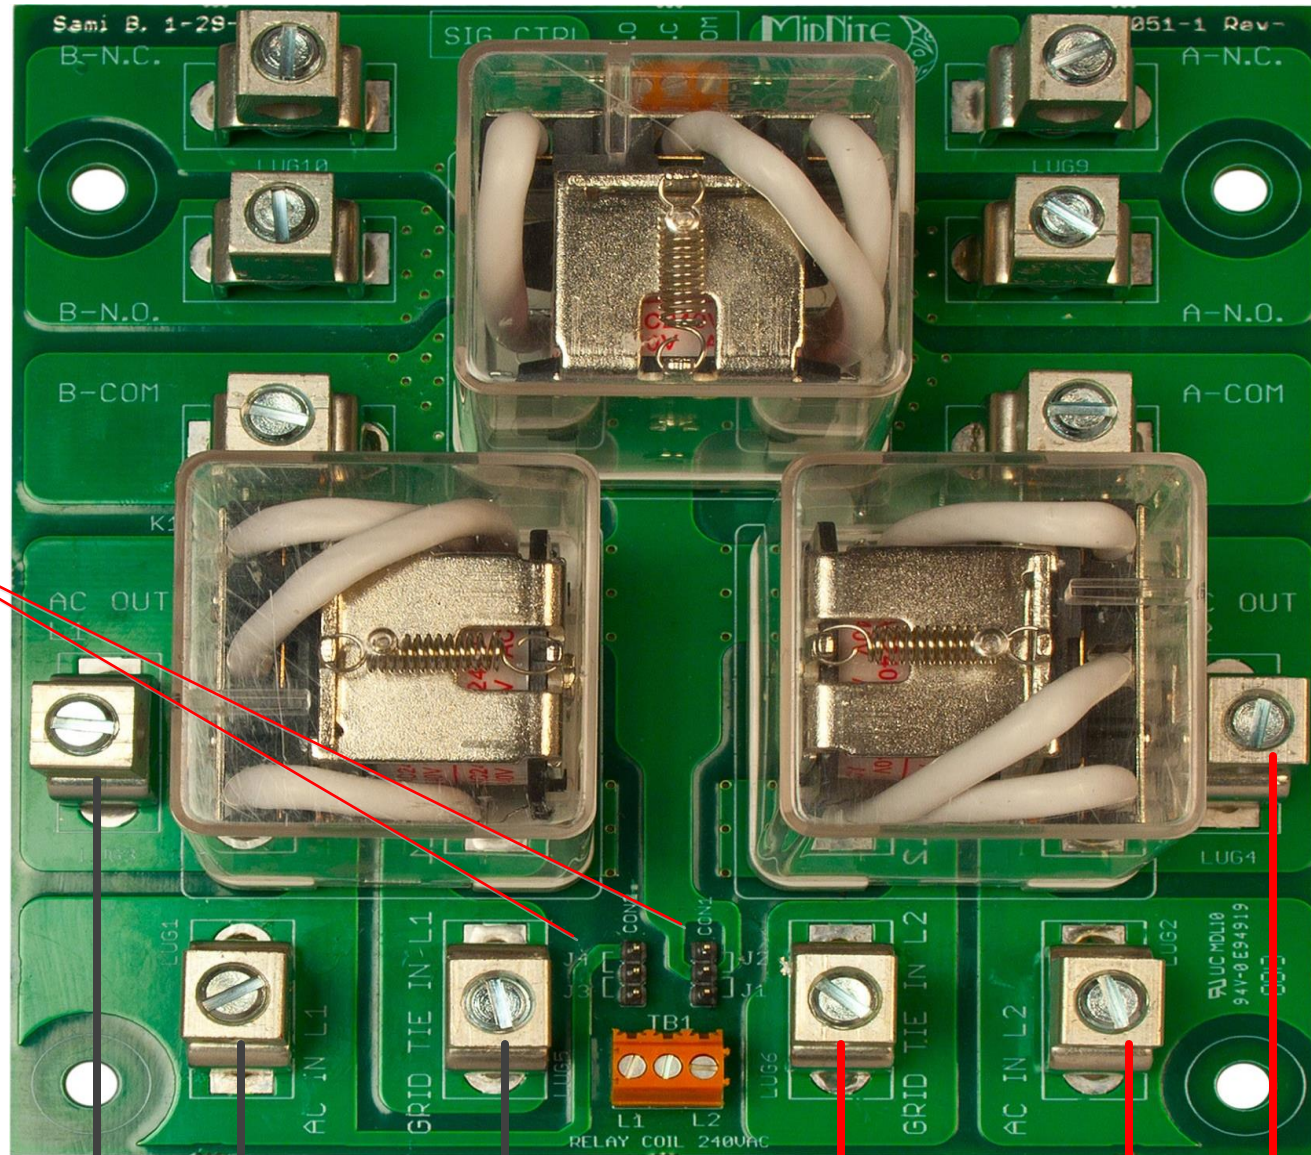

IN THIS CONFIGURATION THE MNTRB80 WILL AUTOMATICALLY SWITCH TO THE GENERATOR WHEN IT IS STARTED. BASICALLY THE RELAY COILS ARE POWERED BY THE 2 TERMINALS THAT ARE FED BY THE GENERATOR

THE PRINT ON THE CIRCUIT BOARD NEEDS TO BE IGNORED. WIRE IT AS SHOWN ON THIS PAGE.

AC 240VAC OUT TO INVERTERS AC INPUT

AC 240VAC IN FROM GENERATOR

AC 240VAC IN FROM UTILITY

